


NOTE: Diode tests are conducted with the board disconnected.

Step 1: RL On command turns on 5V (pins 9, 10, 12) and 12V (pins 5,6) and the 17V for Audio pins 1 and 2.
Also 5V Det from SMPS when 5V turns on but is not used.

Step 2: M5 On command Turns on M5V, then Va, then Vs

P81

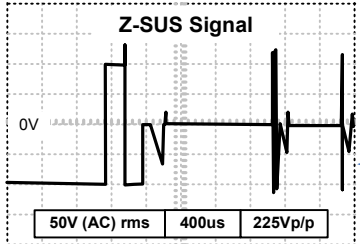

**Connect Scope
between Waveform TP
FL208 on Z board and
Gnd. Use RMS
information just to
check for board
activity.**